 




# Catalogues

Product installation instructions

# Solar Light

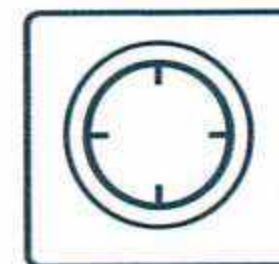

Time  
switch



Intelligent  
light control

 


Wireless  
remote control

 


## Applicable model

 
VT-10W VT-100W  
VT-25W VT-200W  
VT-40W VT-300W  
VT-60W

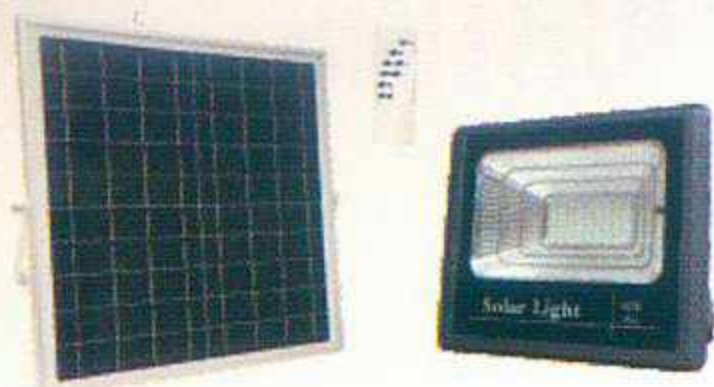

## Remote control key instructions

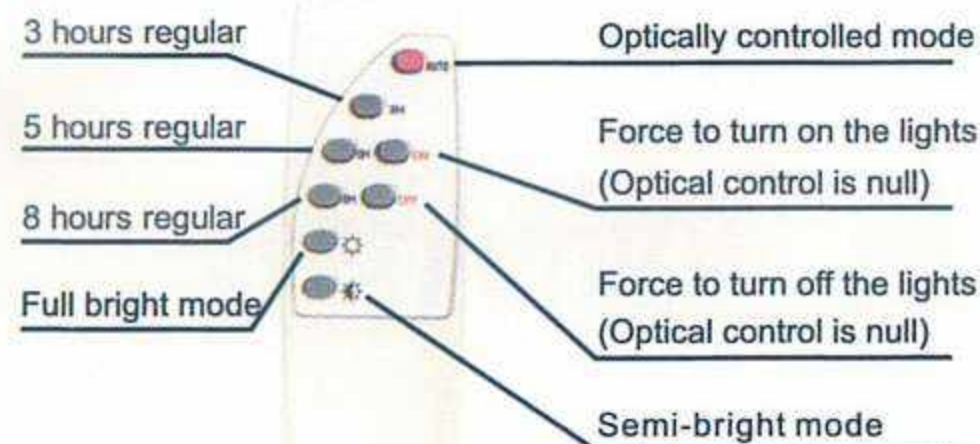

## Installation Guide

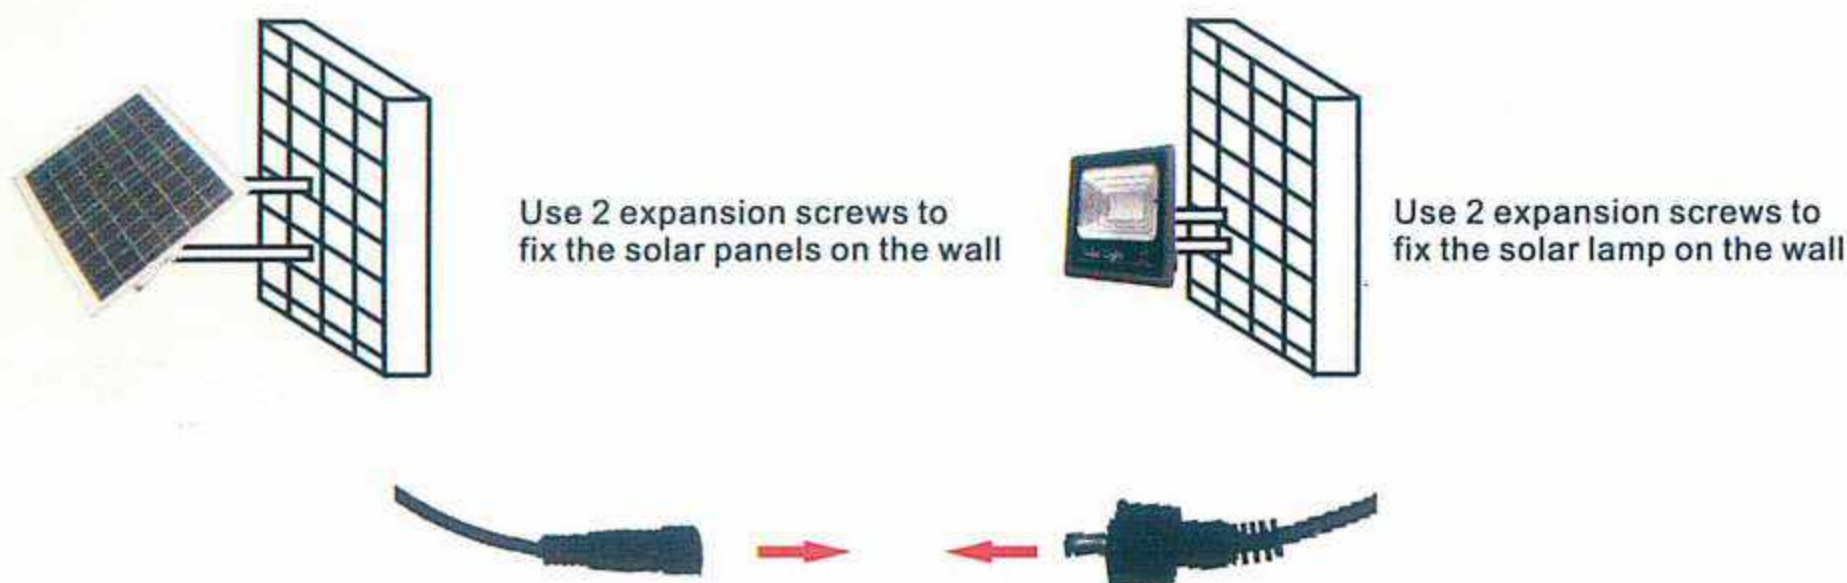

Plug the twist after the twist cap

 
**Tips** The battery must be fully charged before using 3-5 rainy days.

## Installation Notes







1. Solar lights in the factory has been charged with electricity, you can normally light, please check the lights before installation Whether it is working properly;
2. The lamp and solar panels connected to the solar panel against the light, the light does not shine, unplug the connector light, Light sense normal;
3. On the front of the lamp, 5 meters above the lights by AUTO (red), the button lights flash 5 under the lights And remote control is normal;  
Note: the remote control must be remote control receiver, or remote control is not sensitive remote control distance 8-15m;
4. A. the lamp with two inflated studs on the wall, as schematically;  
B. The solar panel Angle adjusts according to the light intensity and time;  
C. lamps can not be installed in low-lying areas, so as not to soak;
5. Plug the male and female plugs and tighten the waterproof cap and install it.
6. After installation check the installation is solid, use the remote control of the lamp to check;
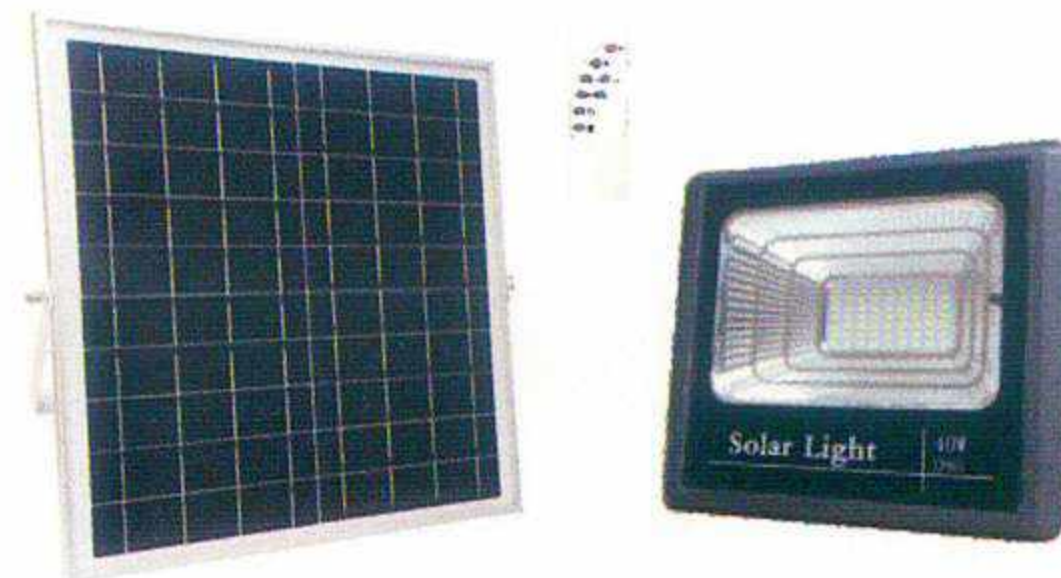
## Applicable model

VT-10W  
VT-25W  
VT-40W  
VT-60W  
VT-100W  
VT-200W  
VT-300W

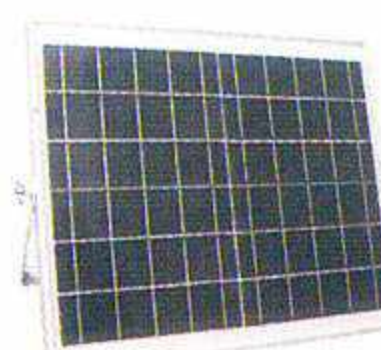

## List

1	 Solar panel	2	 Solar light
3	 Remote control	4	 expansion screw
5	 U-frame	6	 5m wire