

6W RGB+CCT LED Downlight


Model No.: FUT068

1. Introduction

Welcome to the Smart LED Lighting System. This manual describes the simple downlight which can work with RGBWW remote control, Please read the instruction manual carefully before using. Quick and Easy installation of the Smart downlight is the same as any other common downlight. The downlight can also be switched on at the wall for 2.4GHz wireless operation, ON/OFF, dim/brighten and color change. Secure communication is done by syncing the remote and downlight once.

2. Technical Parameters

Model No.	FUT068	White LED QTY	Warm White LED 6pcs/Cold White LED 6pcs
Voltage	AC100~240V 50/60Hz	RGB LED	5050 (0.5W*5pcs)
Power	6W	Lifespan	50000 Hours
Work Temp.	-20~60°C	RF	2.4GHz
Color Temp.	2700K~6500K	Control Distance	30m
CRI	>80	Beam Angle	120°
PF	>0.5	Size	Φ118*38mm
Light Efficiency	85LM/W	Hole Size	90~95mm
Luminous Flux	600LM	Material	Aluminum
White LED	3030 (1W)		

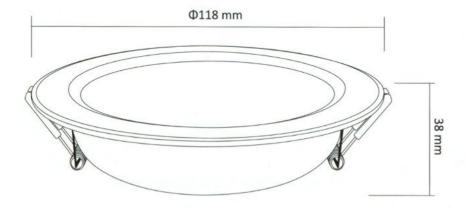


3. Installation

- 1). This product is suitable for the ceiling-mounted installation.
- 2). Please open the hole on the ceiling according to the correct size of Diagram 1.
- 3). Connect the driver properly according to the wire connection Diagram 2. and then put the driver and wire into the ceiling from the hole.
- 4). Push in the two spring elements, make sure that they are deployed and anchored on the back of the ceiling.

Notice: Amateurs do not disassemble or install the lamps.

- Lamp installation must be correct and strict, solid and reliable, avoid long time using in violent vibration place.
- The lamps send out normal quantity of heat during working. Please don't use any cover to cover the body of the lamps.

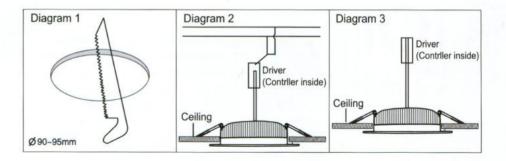


4. Safety Guide

To reduce the risk of electric shock, please ensure the power is not connected when you install the downlight. Even though the light body is cold to touch shortly after normal operation, please be careful when handling the metal cooling fins as they may contain sharp edges. Always hold the light by the acrylic part. If the light is damaged, please seek professional electrical assistance, or please discard the light.

5. Link/Unlink

Compatible with these remote controls (Purchased separately)

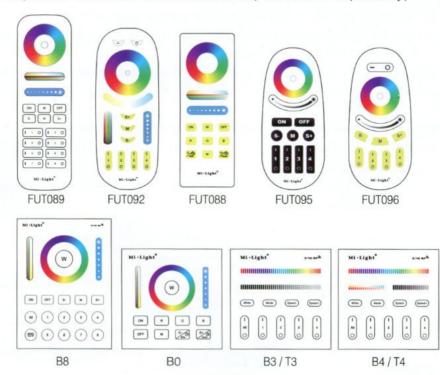



Lighting can be working after linking with remote; for more details, pls read the remote instruction.

