

INSTALLATION INSTRUCTION

MICROWAVE SENSOR(VT-8018)


TECHNICAL DATA:

Power Sourcing:	220-240V/AC
Power Frequency:	50/60Hz
Ambient Light:	<3-2000LUX (adjustable)
Time Delay:	Min. 10sec±3sec Max. 12min±1min
Rated Load:	1200W (Traditional Lighting) 300W (LED Lighting)
Detection Range:	360°/180°
Detection Distance:	Wall: 5-15m (adjustable) Ceiling: 1-8m (radius),(adjustable)
Transmission Power	<0.2mW
Installing Height:	Wall: 1.5-3.5m, Ceiling: 2-8m
Power Consumption:	approx 0.9W
Detection Motion Speed:	0.6-1.5m/s
HF System:	5.8GHz CW radar, ISM band



WARNING

1. Please make sure to turn off the power before starting the installation.
2. Must be installed by professional electrician.



This marking indicates that this product should not be disposed of with other household wastes.



Caution, risk of electric shock.

2 YEARS WARRANTY

INTRODUCTION & WARRANTY

Thank you for selecting and buying V-TAC product. V-TAC will serve you the best. Please read these instructions carefully before starting the installing and keep this manual handy for future reference. If you have any another query, please contact our dealer or local vendor from whom you have purchased the product. They are trained and ready to serve you at the best. The warranty is valid for 2 years from the date of purchase. The warranty does not apply to damage caused by incorrect installation or abnormal wear and tear. The company gives no warranty against damage to any surface due to incorrect removal and installation of the product. This product is warranted for manufacturing defects only. The product is a new saving-energy switch; it adopts microwave sensor mould with high-frequency electro-magnetic wave (5.8GHz) and integrated circuit. It gathers automatism, convenience, safety, saving-energy and practical functions. The wide detection field depends on detectors. It works by receiving human motion. When one enters the detection field, it can start the load at once and identify automatically day and night. Its installation is very convenient and its using is very wide. Detection is possible to go through doors, panes of glass or thin walls

FUNCTION:


- Can identify day and night: It can work in the daytime and at night when it is adjusted on the "sun" position (max). It can work in the ambient light less than 3LUX when it is adjusted on the "3" position (min). As for the adjustment pattern, please refer to the setting pattern.
- Detection range selectable: It can be adjusted according to using location. The detection distance of low sensitivity could be only 2m and high sensitivity could be 16m which fits for large room.
- Time-Delay is added continually: When it receives the second induction signals within the first induction, it will restart to time from the moment.
- Time-Delay is adjustable. It can be set according to the consumer's desire. The minimum time is 10sec±3sec. The maximum is 12min±1min

BEVEZETÉS ÉS GARANCIA

Köszönjük, hogy választotta és megvásárolta a V-TAC terméket. V-TAC nyújtja Önnek a legjobb szolgáltatást. Kérjük, a szerelés előtt figyelmesen olvassa el ezeket az utasításokat és óvja ezt a kézikönyvet későbbi használatra. Ha további kérdései vannak, kérjük, forduljon forgalmazójához vagy helyi eladójához, akitől megvásárolta a terméket. Ők képzetek és készek a legjobb szolgálatra.


A jótállás a vásárlás napjától számítva 2 évig érvényes. A garancia nem vonatkozik a helytelen szerelés vagy az abnormális kopás okozta károokra. A cég nem vállal semmilyen garanciát a felület károsodásáért, a termék helytelen eltávolításáért és szereléséért. Ez a termék garanciája csak a gyártási hibákra vonatkozik.

NOTE: the high-frequency output of the HF sensor is <0.2mW- that is just one 5000th of the transmission power of a mobile phone or the output of a microwave oven, the baby can't touch it




INSTALLATION DIAGRAM:

- Switch off the power.
- Fix the bottom on the selected position with the inflated screw through the screw holes at the side of the sensor.
- Connecting the power and the load to sensor as per the connection-wire diagram.
- Switch on the power and test it

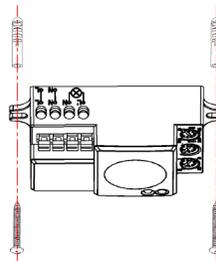


CONNECTION-WIRE DIAGRAM

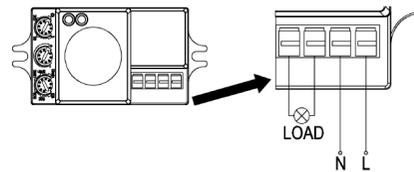

TEST:

- Turn the LUX knob clockwise on the maximum (sun), Turn the SENS knob clockwise on the maximum (+). Turn the TIME knob anti-clockwise on the minimum (10s).
- When you switch on the power, the light will be on at once. And 10sec±3sec later the light will be off automatically. Then if the sensor receives induction signal again, it can work normally.
- When the sensor receives the second induction signals within the first induction, it will restart to time from the moment.
- Turn LUX knob anti-clockwise on the minimum (3). If the ambient light is less than 3LUX (darkness), the inductor load could work when it receives induction signal

NOTE: when testing in daylight, please turn LUX knob to ☀ (SUN) position, otherwise the sensor lamp could not work!



- Electrician or experienced human can install it.
- Can not be installed on the uneven and shaky surface
- In front of the sensor there shouldn't be obstructive object affecting detection.
- Avoid installing it near the metal and glass which may affect the sensor.
- For your safety, please don't open the case if you find hitch after installation.
- In order to avoid the unexpected damage of product, please add a safe device of current 6A when installing microwave sensor, for example, fuse, safe tube etc.

FUNKCIÓ:

- Nappalt vagy éjszakát tud beazonosítani: A felhasználó különböző környezeti fényre szabályozhatja a működési állapotot. Nappalban és éjszaka is működik, ha a LUX kapcsoló a „nap” helyzetbe van állítva (maximum). A LUX-nál alacsonyabb környezeti fényben működik, ha a „3” helyzetbe van állítva (minimum). Ami a beállítás módját illeti, kérjük, olvassa el a tesztelési rajtot.
- Az érzékelési tartomány választható: A felhasználás helyének megfelelően lehet szabályozni. Az alacsony érzékenység érzékelési távolsága csak 2 méter, a magas érzékenység érzékelési távolsága pedig 16 méter, amelyet nagy helyiségekre lehet alkalmazni.
- Az időtartás folyamatosan növekszik: amikor megkapja a második indukciós jeleket az első indukció keretén belül, az idő újra indul attól a pillanattól kezdve.
- Az időtartás választható: A fogyasztó kívánása szerint állítható be. A minimális idő 10másodperc±3másodperc. A maximális idő 12perc±1perc.

FELSZERELÉSI ÚTMUTATÓ

- Kapcsolja ki a tápellátást.
- Rögzítse az alzatot a kívánt helyzetbe a dübel segítségével az érzékelő oldalán lévő csavarfuratokon keresztül.
- Csatlakoztassa a tápellátást és a terhelést az érzékelőhöz az áramköri rajz szerint.
- Kapcsolja be a készüléket és tesztelje azt.