

INSTALLATION INSTRUCTION

INFRARED MOTION SENSOR(VT-8029)

TECHNICAL DATA:

Power Sourcing:	220-240V/AC
Power Frequency:	50/60Hz
Ambient Light:	<3-2000LUX (adjustable)
Time Delay:	Min.10sec±3sec Max. 15min±2min
Rated Load:	1200W (Traditional Lighting) 300W (LED Lighting)
Detection Range:	360°
Detection Distance:	6m max(<24°C)
Working Temperature:	-20~+40°C
Working Humidity:	<93%RH
Installing Height:	2.2-4M
Power Consumption:	approx 0.5W
Detection Motion Speed:	0.6-1.5m/s

WARNING

1. Please make sure to turn off the power before starting the installation.
2. Must be installed by professional electrician.

This marking indicates that this product should not be disposed of with other household wastes.



Caution, risk of electric shock.

2 YEARS WARRANTY

INTRODUCTION & WARRANTY

Thank you for selecting and buying V-TAC product. V-TAC will serve you the best. Please read these instructions carefully before starting the installing and keep this manual handy for future reference. If you have any another query, please contact our dealer or local vendor from whom you have purchased the product. They are trained and ready to serve you at the best. The warranty is valid for 2 years from the date of purchase. The warranty does not apply to damage caused by incorrect installation or abnormal wear and tear. The company gives no warranty against damage to any surface due to incorrect removal and installation of the product. This product is warranted for manufacturing defects only. The product adopts good sensitivity detector and integrated circuit. It gathers automation, convenience, safety, saving-energy and practical functions. It utilizes the infrared energy from human as control-signal source and it can start the load at once when one enters detection field. It can identify day and night automatically. It is easy to install and used widely.

FUNKCIÓ:

- Can identify day and night: The consumer can adjust working state in different ambient light. It can work in the daytime and at night when it is adjusted on the "sun" position (max). It can work in the ambient light less than 3LUX when it is adjusted on the "3" position (min). As for the adjustment pattern, please refer to the testing pattern.
- Time-Delay is added continually: When it receives the second induction signals within the first induction, it will restart to time from the moment.



Good sensitivity



Poor sensitivity


HU BEVEZETÉS ÉS GARANCIA

Köszönjük, hogy választotta és megvásárolta a V-TAC terméket. V-TAC nyújtja Önnek a legjobb szolgáltatást. Kérjük, a szerelés előtt figyelmesen olvassa el ezeket az utasításokat és ővja ezt a kézikönyvet későbbi használatra. Ha további kérdései vannak, kérjük, forduljon forgalmazójához vagy helyi eladóhoz, aiktól megvásárolta a terméket. Ők képzetek és készek a legjobb szolgálatra. A jótállás a vásárlás napjától számítva 2 évig érvényes. A garancia nem vonatkozik a helytelen szerelés vagy az abnormalis kopás okozta károkra. A cég nem vállal semmilyen garanciát a felület károsodásáért, a termék helytelen eltávolításáért és szereléséért. Ez a termék garanciája csak a gyártási hibákra vonatkozik.

INSTALLATION ADVICE:

As the detector responds to changes in temperature, avoid the following situations:

- Avoid pointing the detector towards objects with highly reflective surfaces, such as mirrors etc.
- Avoid mounting the detector near heat sources, such as heating vents, air conditioning units, light etc.
- Avoid pointing the detector towards objects that may move in the wind, such as curtains, tall plants etc.

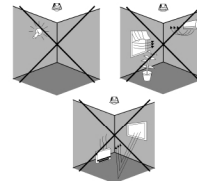


INSTALLATION DIAGRAM:


- Unload the transparent vinyl cover which is at the bottom of the sensor.
- Loose the screws in the connection terminal, and then connect the power to connection terminal of sensor according to connection-wire diagram.
- Install back the transparent vinyl cover into the original location.
- Fold the metal spring of the sensor upwards, until they are in "I" position with sensor, and then put the sensor into the hole or installation box which is on the ceiling and has the similar size with the sensor. Releasing the spring, the sensor will be set in this installation position.
- After finishing installing, turn on the power and then test it



SENSOR INFORMATION

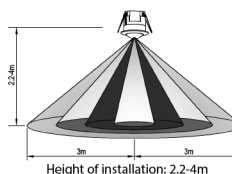


Height of installation: 2.2-4m

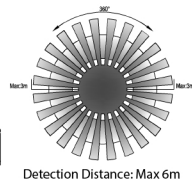

Detection Distance: Max 6m


CONNECTION-WIRE DIAGRAM

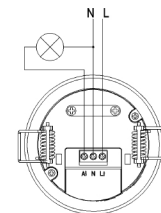

TEST:

- Turn the TIME knob anti-clockwise on the minimum (10s). Turn the LUX knob clockwise on the maximum (sun).
- Switch on the power; the sensor and its connected lamp will have no signal at the beginning. After Warm-up 30sec, the sensor can start work. If the sensor receives the induction signal, the lamp will turn on. While there is no another induction signal any more, the load should stop working within 10sec±3sec and the lamp would turn off.
- Turn LUX knob anti-clockwise on the minimum (3). If the ambient light is more than 3LUX, the sensor would not work and the lamp stop working too. If the ambient light is less than 3LUX (darkness), the sensor would work. Under no induction signal condition, the sensor should stop working within 10sec±3sec.

NOTE: when testing in daylight, please turn LUX knob to ☀ (SUN) position, otherwise the sensor lamp could not work!



FUNKCIÓ

- Nappalt vagy éjszakát tud beazonosítani: A felhasználó különböző környezeti fényre szabályozhatja a működési állapotot. Napközben és éjszaka is működik, ha a LUX kapcsoló a „nap” helyzetre van állítva (maximum). 3 LUX-nál alacsonyabb környezeti fényben működik, ha a „3” helyzetre van állítva (minimum). Ami a beállítás módját illeti, kérjük, olvassa el a tesztelési rajzot.
- Az időtartás folyamatosan növekszik: amikor megkapja a második indukciós jeleket az első indukció keretén belül, az idő újra indul attól a pillanattól kezdve.
- FELSZERELÉSI ÚTMUTATÓ**
- Vegye le az érzékelő alsó részén lévő átlátszó vinyl fedeleit.
- Csavarja ki az vezeték összekötőn lévő csavarokat és csatlakoztassa a tápvezetéket az érzékelő vezeték összekötőjéhez az áramkört rajz szerint.
- Szerelje vissza az átlátszó vinyl fedeleit az eredeti helyére.
- Húzza felfelé az érzékelő fémrugóját mindaddig, amíg az érzékelővel I pozícióba nem kerül, utána helyezze be az érzékelőt a nyílásba vagy a mennyezeten lévő, az érzékelő méretéhez hasonló méretű beszerelő dobozba. A rugó elengedésekor az érzékelő ebben a beszerelt állapotban fog maradni.
- A beszerelés befejezése után kapcsolja be a készüléket és tesztelje azt.