




## PRODUCT SPECIFICATION

DESCRIPTION:	DECORATIVE WOODEN WALL PANEL
MATERIAL:	WOOD (WALNUT / OAK) POLYSTYRENE (XPS)
TYPE:	SPLIT / SLEEK
FINISH:	NATURAL / GLOSSY / MAHOGANY / ROSEWOOD
SIZE OF PANEL:	550 X 93 MM WITH +/- 0.5 MM (0.05 SQM)
SIZE OF PIECES:	23 X 30 - 300 MM
PROJECTION FROM THE WALL:	8-21 MM WITH THE 6MM BOARD
WEIGHT OF PANEL:	350 GRAMS WITH +/- 50 GRAMS
PACKAGE:	20 PANELS COVERS 1 SQM (7-8 KGS)
FLAMMABILITY CLASS:	CLASS C, BUT YOU CAN USE A FIRE PROOF COATING / FIRE RETARDANT PAINT AFTER INSTALLING
MADE IN:	HUNGARY AND POLAND

### INSTALLATION MANUAL:

1. INSTALL OVER RELATIVELY SMOOTH FLAT SURFACES, ALL MAJOR HOLES OR MAJOR DAMAGE MUST BE REPAIRED. SURFACE MUST BE CLEAN, DRY AND FREE OF LOOSE DEBRIS.
2. TAKE THE PANELS OUT THE PACKAGING ONLY WHEN YOU ARE USING THEM.
3. USE POLYSTYRENE ADHESIVE (PLEASE READ CAREFULLY THE INSTRUCTION OF ADHESIVE AS WELL) AND APPLY IT TO THE BACK OF THE PANEL.
4. STICK THE PANEL ON THE WALL AND PUT EQUAL PRESSURE TO THE PANEL WHEN INSTALLING THEM.
5. ALIGN WITH OTHER PANELS INSTALLED AND CHECK USING A LEVEL TO CONFIRM DURING INSTALLATION. FOLLOW A SIMILAR, IRREGULAR PATTERN.

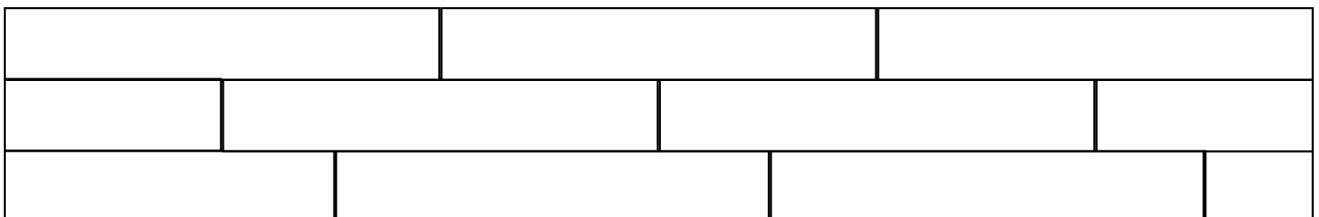

6. IF YOU NEED SMALLER PIECES THAN A WHOLE PANEL YOU CAN CUT BY HAND WITH A SAW ON A WORK BENCH.
7. IF YOU WANT YOU CAN PAINT THEM ON THE WALL AFTER INSTALLATION. CLEANING WITH VACUUM CLEANER OR DRY CLEANING CLOTHS ARE RECOMMENDED.