

LED PANEL INSTALLATION MANUAL


asalite[®]




ATTENTION / NOTICE

Turn off the power before performing a check, installation, or removal.
Make proper electrical grounding.


Pending (Suspended)

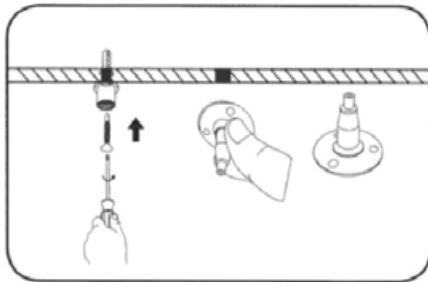


- ① Screw the round bases on the ceiling.

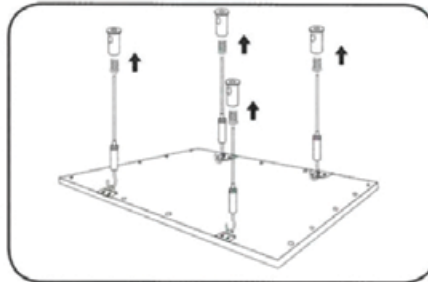


- ② Fasten the hooks on the handle of the clip.

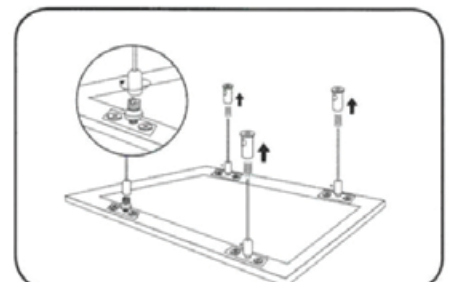


- ③ Screw the two screws faces in the frame. Tighten the nut to the side.

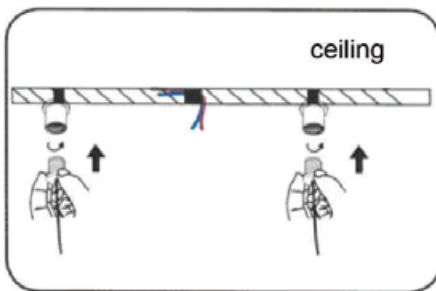

- ④ Screw the cable to the ceiling mount.

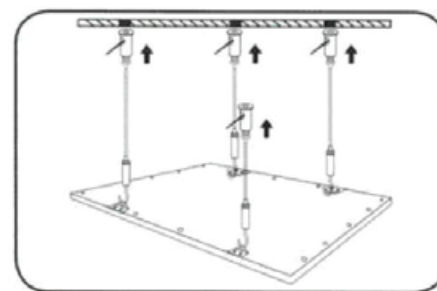


- ⑤ Attach the LED panel to the ceiling, and make final adjustments to the desired height.

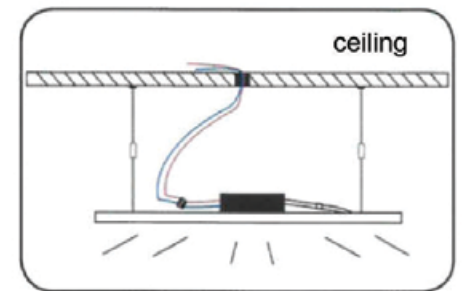


- ⑥ Connect the driver to the electrical network.


Built-in (supported on T-bar)

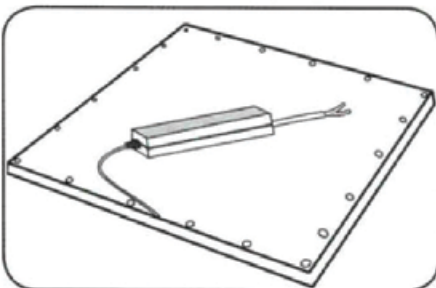


- ① Connect the driver to the LED and lean it on the back.

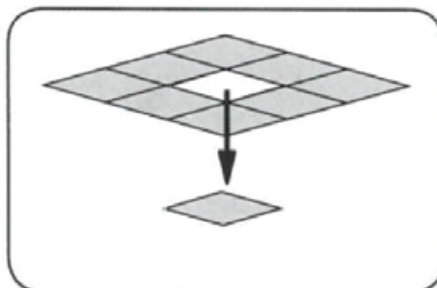


- ② Remove the ceiling plate from the plaster.

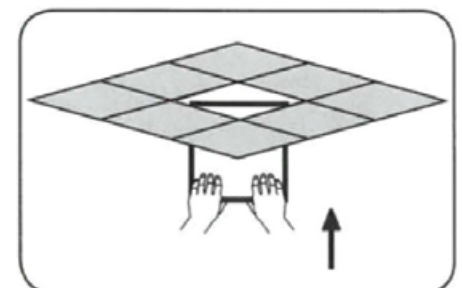


- ③ Place the LED panel on the ceiling grid.

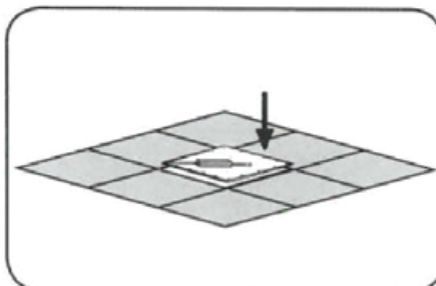



- ④ Make sure the LED panel is set properly inside the T bars of the ceiling.

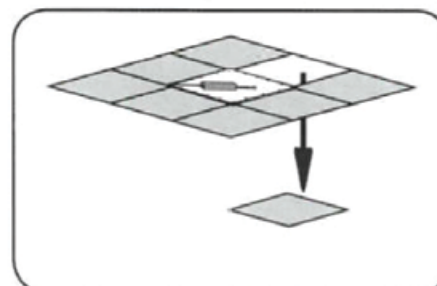

- ⑤ Remove a ceiling plate from the close to the LED panel.

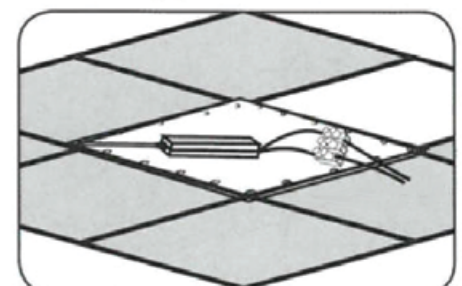


- ⑥ Make the electrical connection driver to the power network.

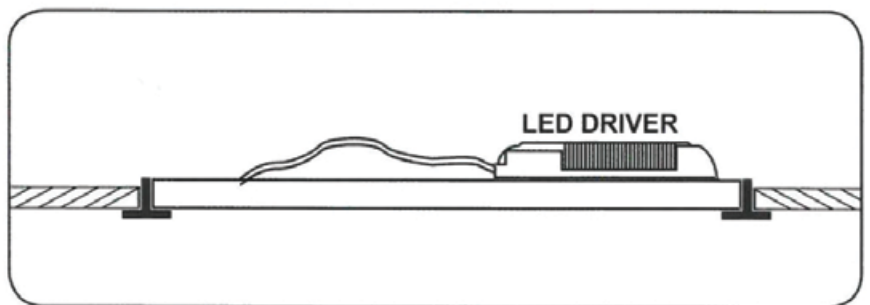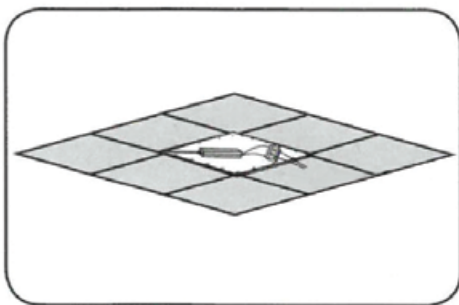


⑦ Replace the plasterboard to complete the installation.


Built-in lining (spring clip)

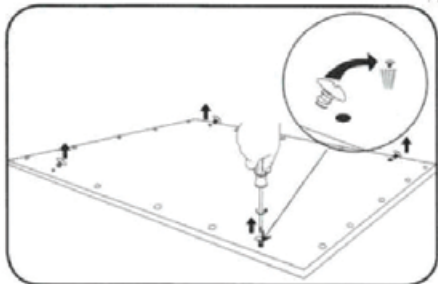


① Remove the screws from the position indicated in the picture.

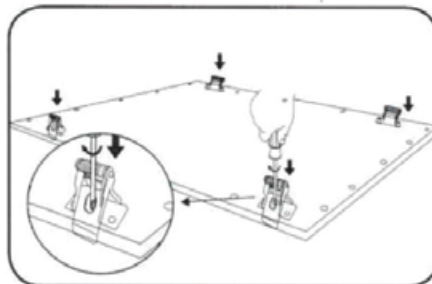


② Fasten the tabs to the same positions as the removed screws by screwing in the center.

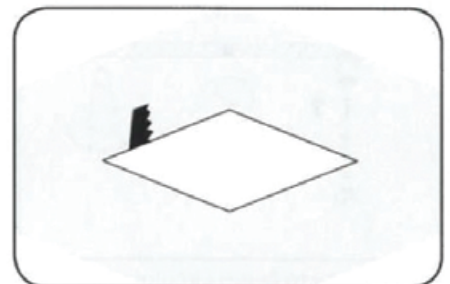

③ Make a cut in the ceiling according to the measures to be built.

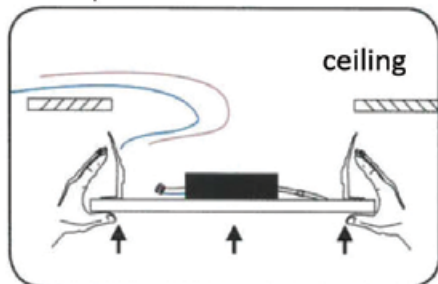


④ Wire the driver. With the tabs open, place the panel inside the ceiling.

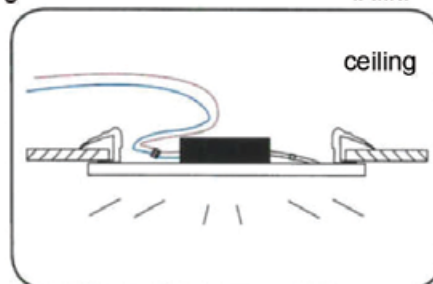


⑤ Grip loops gently until the panel fixes on the ceiling, completing the installation.


Supported overlay

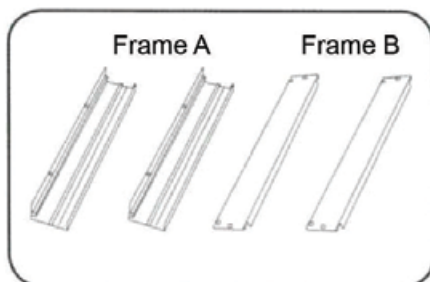


① Identify the two types of frame as shown above.

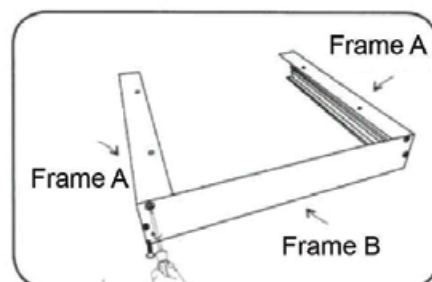


② Screw two frames "A" with a frame "B".

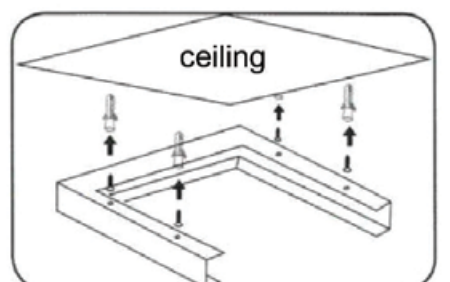


③ Screw the frame into the ceiling

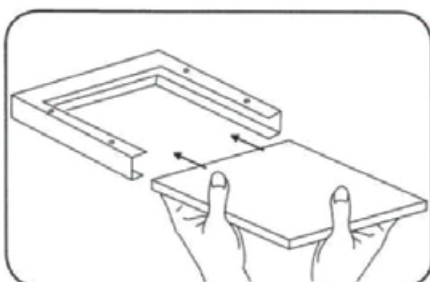

④ Attach the LED panel to the frame by sliding it.

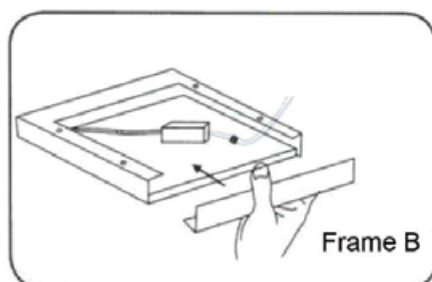

⑤ Screw the other frame "B" on the remaining side.

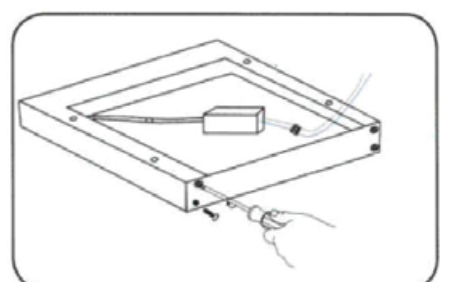

⑥ Finish the electrical installation and screw the frame.

Importer / Forgalmazó / Importeur / Importateur / Dovožca / Dovožce / Importator / Uvoznik / Uvoznik :

Peter Monoki E.V., 4033 Debrecen Vak Bottyán street 22/A Hungary E-mail: info@asalite.com If you have any enquires or need a product support, please contact your local distributor. For more information, visit: www.asalite.com Made in / Gyártási hely / Prođus in / Ursprungland / Fabriqué en / Vyrobeno v / Vyrobené v / Zemlja porijekla / Izdelano v : P.R.C. Copyright © 2019. Asalite All rights reserved.

LED PANEL TELEPÍTÉSI ÚTMUTATÓ


asalite[®]




FIGYELEM / MEGJEGYZÉS

Kapcsolja le az áramot mielőtt ellenőrzi, telepíti vagy eltávolítja a készüléket.
Figyeljen a megfelelő elektromos földelésre.


Befüggesztett telepítés

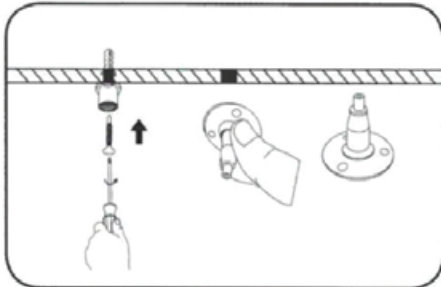


- ① Csavarja be a kerek tipliket a plafonba.

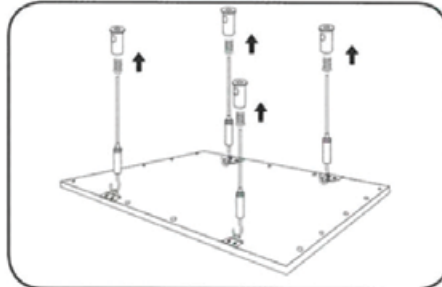


- ② Akassza be a kampókat a panelen az akasztókba.

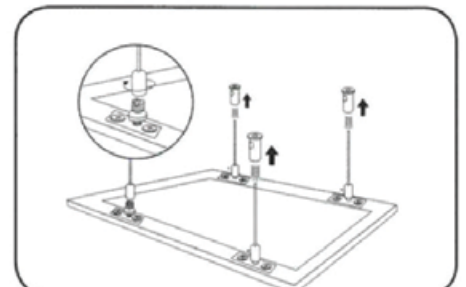


- ③ Csavarozza össze a két csavart a kereten. Szorítsa meg az anyát.

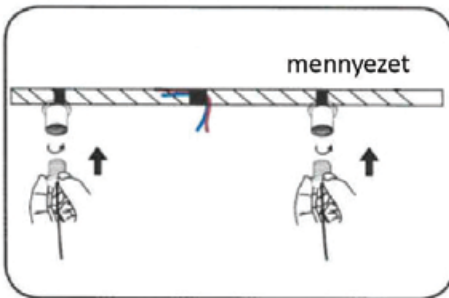

- ④ Csavarozza be a kábelt a mennyezeti tartó tiplikbe.

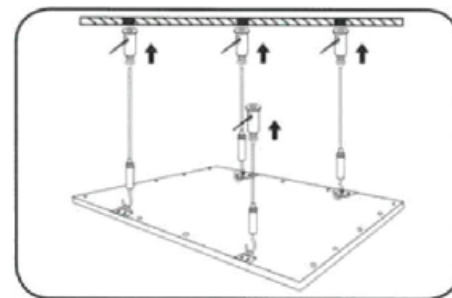


- ⑤ Függessze fel a LED panelt a mennyezetre, és állítsa be a kívánt magasságot.

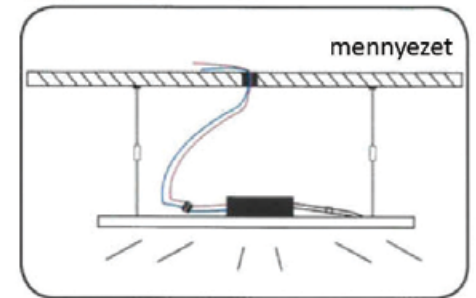


- ⑥ Kösse be a drivert a elektromos hálózatba.


Álmennyezetbe építés (T keresztmetszetű sínekre)

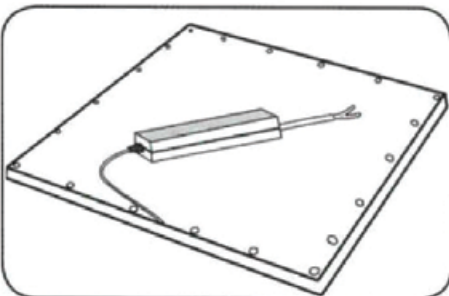


- ① Kösse be a drivert a Led panelbe és rögzítse a hátoldalán.

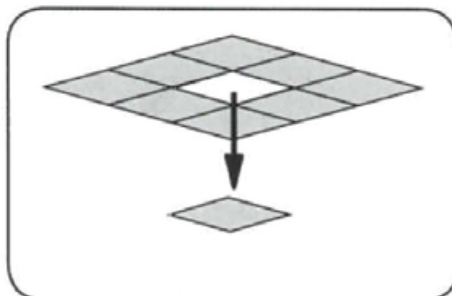


- ② Távolítsa el a álmennyezeti panelt.

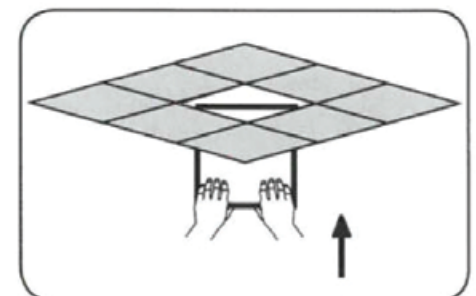


- ③ Helyezze a LED panelt a mennyezeti rácsba.

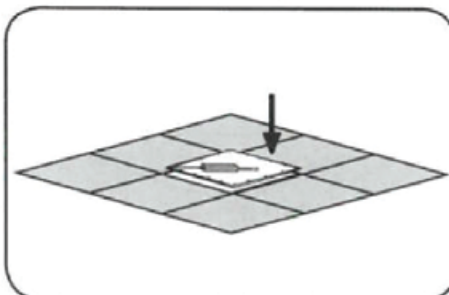



- ④ Győződjön meg róla, hogy a LED panel megfelelően fekszik a T alakú sínekben.

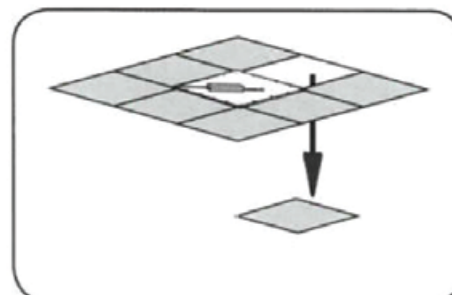

- ⑤ Távolítsa el a LED panel melletti álmennyezet panelt.

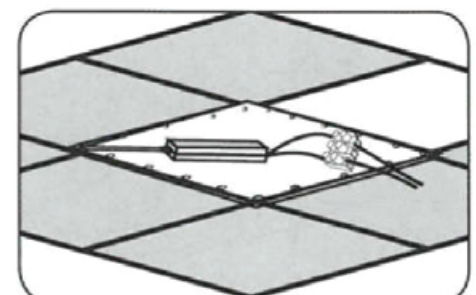


- ⑥ Kösse be a drivert a elektromos hálózatba.

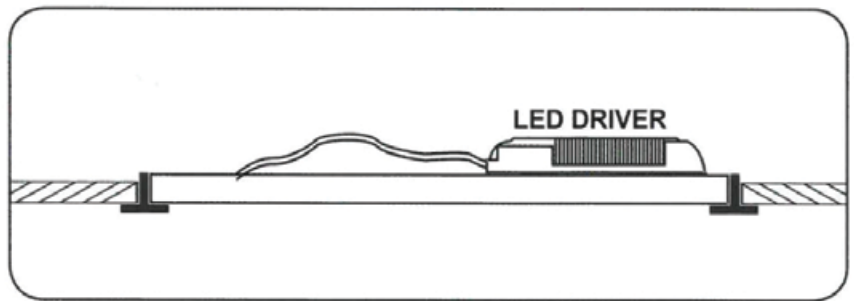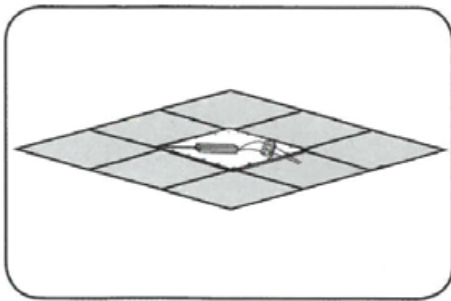


⑦ Helyezze vissza a gipszkartont a telepítés befejezéséhez.


Álmennyezetbe építés (T keresztmetszetű sínekre)

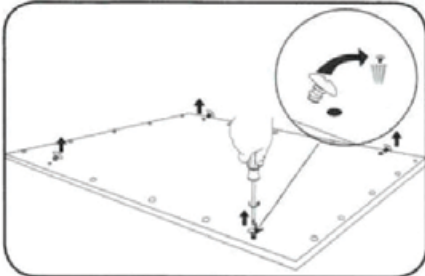


① Távolítsa el a csavarokat a képen látható helyekről.

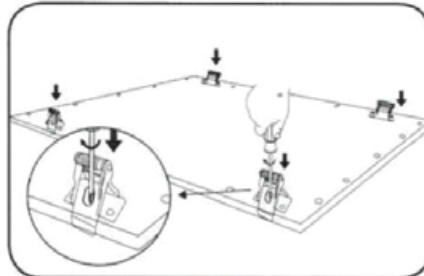


② Rögzítse a klipszeket a kivett csavarok helyére a középső lyukon keresztül.

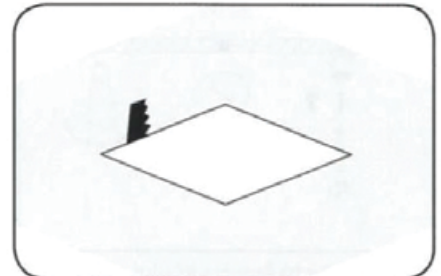

③ Vágjon a gipszkarton mennyezetbe a beépíteni kívánt LED panelnek megfelelő méretű lyukat.

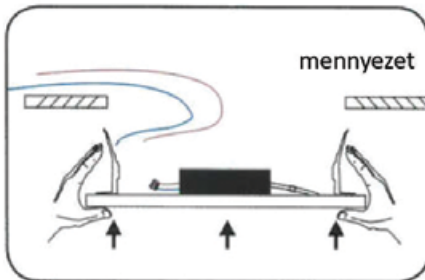


④ Kösse be a drivert a Led panelbe és rögzítse a hátoldalán. Nyissa ki a füleket, helyezze a panelt a mennyezetbe.

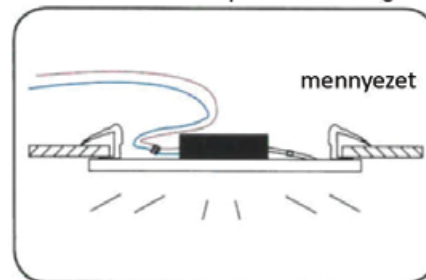


⑤ Óvatosan tolja be a panelt a helyére, míg a panel nem illeszkedik és rögzül tökéletesen.


Keretbe építés

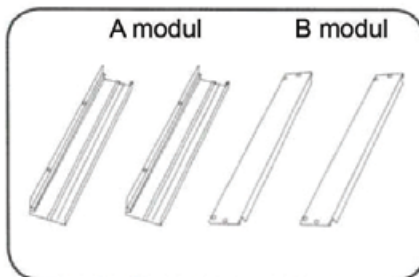


① Azonosítsa a két keret elemet az ábra szerint.

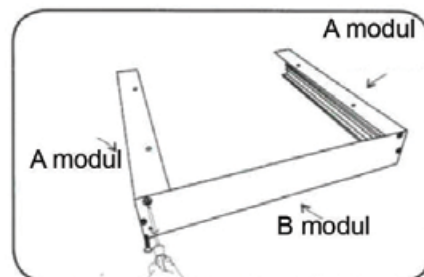


② Csavarozza össze az "A" és "B" elemeket.

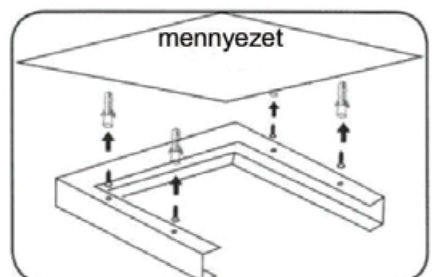


③ Rögzítse a keretet a mennyezetre.

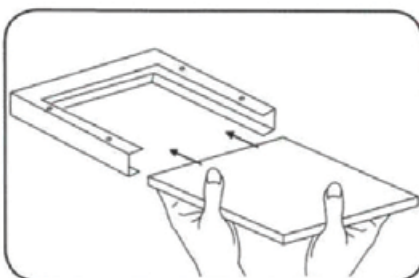

④ Csúsztassa be LED panelt a keretbe.

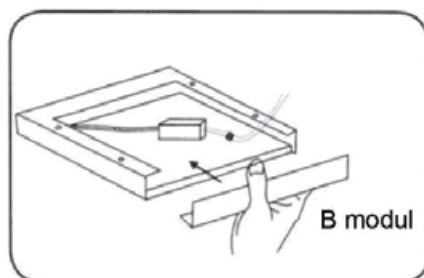

⑤ Helyezze be a megmaradt "B" elemet az üresen maradó oldalon.

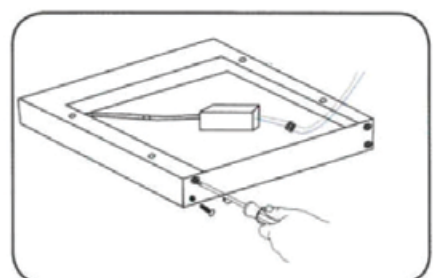

⑥ Végezze el az elektromos bekötést és csavarozza be a keretet.

Importer / Forgalmazó / Importeur / Importateur / Dovožca / Dovožce / Importator / Uvoznik / Uvoznik :

Peter Monoki E.V., 4033 Debrecen Vak Bottyán street 22/A Hungary E-mail: info@asalite.com If you have any enquires or need a product support, please contact your local distributor. For more information, visit: www.asalite.com Made in / Gyártási hely / Produis in / Ursprungland / Fabriqué en / Vyrobeno v / Vyrobené v / Zemlja porijekla / Izdelano v : P.R.C. Copyright © 2019. Asalite All rights reserved.