

User Manual



LED CT Controller

-with touchable button

Rev:1.0


Forward

Thanks for choosing our color temperature touch led controller. The complete package includes a controller, one remote, do check if there's any defect during transportation before use, if so, please don't use and inform your supplier immediately.

Technical Specifications

Input voltage:	DC12~DC24V
Loadable current:	6Ax2CH 12A MAX.
Output power:	144W/288W(DC12V/DC24V)
Color Chose:	2 (warm white and cold white)
Dimmering mothod:	PWM
Grey steps:	256 steps per channel
Intersity steps:	10 steps
Connection mode:	common anode
Control mode:	touchable/RF Remote control
Radio Frequency:	433MHz
Controlable distance:	>20m
Working Temp:	-30°C~+60°C
Remote battery type:	3 pcs AAA type batteries

Panel and interface description

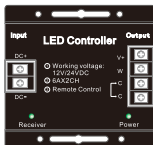

Symbol	Function
	Turn off/on the LED light in any state.
	Be used to quickly get warm white or cool white.
	Color temprature adjustment key, be used to quickly get any color temprature between warm white and cool white.
	Used to increase or reduce the brightness .
	Voltage of power input port : 12 / 24 V DC
	Power output port for connecting LED lights.
	Indicative light to show the power and signal receiver state.


Installation battery of the Remoter

This remoter is used 3 pcs AAA batteries, each voltage is 1.5V. Open the cover of the battery; load 3 pcs AAA batteries correctly as per the positive and negative instructions in the battery pack.


Notice:

If the indicator lights on the remote controller flash regularly without touch, please note the battery should be changed.

Product size

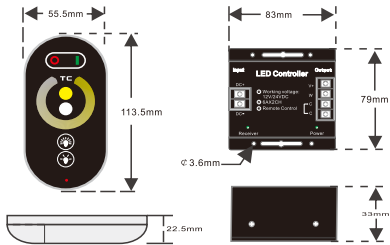

Connection diagram

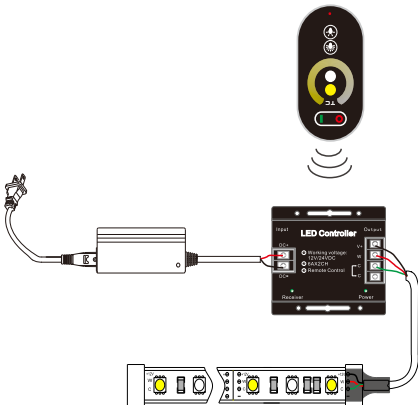

Safety warnings

1. Please install the products by professional electrician.
2. This product can not waterproof, please put into water-proof tank if the clients want to use it outdoor.
3. Always be sure to mount this unit in an area that will allow proper ventilation to ensure a fitting temperature.
4. Please don't install this controller in lightening, intense magnetic and high-voltage fields.
5. Check if the voltage and power adapter suit the controller and LED lights.
6. Please make sure the wires can sufficiently load the LED lights for avoiding accident.
7. Please make sure all the wires are connected correctly before switching on the power.
8. Please do not repair or maintain privately, any query, please contact suppliers.

Friendly reminding:

The Power should not be overloaded. for high performance, please keep at least 20% margin for power.

After-sale service

- 1.The customers enjoy lifelong technical support for our products.
2. The customers enjoy free maintenance or replacement for quality problems within one year upon date of purchasing. If
3. If the free warranty time is overdue, We will charge certain cost of raw materials for repair or maintenance.
4. Following cases are excluded free warranty terms:
 - ◆ Any defects caused by wrong operations.
 - ◆ Any damages caused by unauthorized removal,maintenance, modifying circuit, incorrect connections and replacing chips.
 - ◆ Any damages due to transportation, breaking, flooding water after the purchase.
 - ◆ Any damages caused by earthquake, fire, flood, lightning strike etc force majeure of natural disasters.
 - ◆ Any damages caused by negligence, inappropriate storing at high temperature and humidity environment or near harmful chemicals.
5. Our company would take up the biggest responsibility to replace the same type and quantity accordingly..
- 6.The clients please inform suppliers the faulty phenomena,using environment etc. for speeding up the maintenance process.
- 7.The manual is only suitable for this model,any update is subject to change without prior notice.

Exception Handles

Malfunction	Causation	Solution
No light	<ol style="list-style-type: none"> 1. No power 2. The protection of the power supply is active 3. Wrong connection 	<ol style="list-style-type: none"> 1. Check the power 2. Check the fault then power on again 3. Check the connection
Incorrect color	<ol style="list-style-type: none"> 1. Wrong connection from WC wire 2. Wrong connectin of in-phase cable 	<ol style="list-style-type: none"> 1. Re-connect wc wires correspondently 2. Re-connect in-phase wires correspondently
No response from the remoter	<ol style="list-style-type: none"> 1. battery power is not enough 2. The distance between controller and LED lights is too far. 	<ol style="list-style-type: none"> 1. Change or install the battery accordingly 2. Shorten the remote distance
Delay response from the remoter	<ol style="list-style-type: none"> 1. The distance between controller and LED lights is too far. 2. Wire diameter is too small 3. Overload beyond controller or power supply capability 	<ol style="list-style-type: none"> 1. Reduce cable or use loop supply 2. Change wider wire 3. add power amplifier
Uneven intensity between front and rear, with voltage drop	<ol style="list-style-type: none"> 1. Output cable is too long 2. Wire diameter is too small 3. Overload beyond controller or power supply capability 	<ol style="list-style-type: none"> 1. Reduce cable or use loop supply 2. Change wider wire 3. add power amplifier
Signal chaos between controller and remoter	<ol style="list-style-type: none"> 1. May be there are more than one remote controller controlling the same LED lights at the same time. 	<ol style="list-style-type: none"> 1. Find out other remote controllers and closed.

工艺要求：

- 1.此设计文件为1:1图纸，尺寸为：70*70mm.
- 2.制作效果按照此图效果制作。彩色输出。
- 3.纸质为铜版纸光面处理
- 4.排版格式

a.正面：

封面	第一页	第二页	第三页
----	-----	-----	-----

a.反面：

第四页	第五页	第六页	第七页
-----	-----	-----	-----

成品：八页折叠可拉伸