



Meaningful Innovation.

WEEE Number: 80133970

# INSTRUCTION MANUAL

## MICROWAVE SENSOR DOWNLIGHT TYPE-ADJUSTABLE



COMPATIBLE WITH

V-TAC LED  
RANGE (UPTO 400W)

**05** YEAR  
WARRANTY\*

### TECHNICAL DATA

MODEL	VT-80360
SKU	23165
INPUT POWER	AC: 220-240V, 50/60 Hz
RATED LOAD	Max. 1200W ☀ 300W ⚡ +LED
TIME DELAY	Min. 10sec ±3sec Max. 12min ±1min
DETECTION RANGE	360°
DETECTION DISTANCE	1-8m (Radius), Adjustable
DETECTION MOVING SPEED	0.6-1.5m/s
WORKING TEMPERATURE	-20°C to +40°C

POWER CONSUMPTION	Approx, 0.5W
AMBIENT LIGHT	<3-2000 LUX (Adjustable)
INSTALLATION HEIGHT	1.5-3.5m
POWER CONSUMPTION	approx 0.9w
DETECTION MOTION SPEED	0.6-1.5 m/s
IP RATING	IP20
HF SYSTEM	5.8Ghz CW Radar, ISM Band
DIMENSION	Ø80x66.6 mm

### INTRODUCTION & WARRANTY

Thank you for selecting and buying V-TAC product. V-TAC will serve you the best. Please read these instructions carefully before starting the installation and keep this manual handy for future reference. If you have any another query, please contact our dealer or local vendor from whom you have purchased the product. They are trained and ready to serve you at the best. The warranty is valid for 5 years from the date of purchase. The warranty does not apply to damage caused by incorrect installation or abnormal wear and tear. The company gives no warranty against damage to any surface due to incorrect removal and installation of the product.



#### MULTI-LANGUAGE MANUAL QR CODE

Please scan the QR code to  
access the manual in multiple languages.

In case of any query/issue with the product, please reach out to us at: support@v-tac.eu  
For More products range, inquiry please contact our distributor or nearest dealers.  
V-TAC EUROPE LTD. Bulgaria, Plovdiv 4000, bul.L.Karavelow 9B

## WARNING

1. Please make sure to turn off the power before starting the installation.
2. Installation must be performed by a qualified electrician.
3. For Indoor use only



This marking indicates that this product should not be disposed of with other household wastes.





Caution, risk of electric shock.

## FUNCTION


1. Can identify day and night: It can work in the daytime and at night when it is adjusted on the "sun" position (max). It can work in the ambient light less than 3LUX when it is adjusted on the "3" position (min). As for the adjustment pattern, please refer to the testing pattern.
2. SENS adjustable: It can be adjusted according to using location. The detection distance of low sensitivity could be only 2m and high sensitivity could be 16m which fits for large room.
3. Time-Delay is added continually: When it receives the second induction signals within the first induction, it will restart to time from the moment.
4. Time-Delay is adjustable. It can be set according to the consumer's desire. The minimum time is 10sec±3sec. The maximum is 12min±1min.

**NOTE: the high-frequency output of the HF sensor is <math><0.2\text{mW}</math>- that is just one 5000th of the transmission power of a mobile phone or the output of a microwave oven, the baby can not touch it**

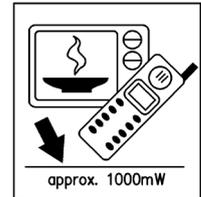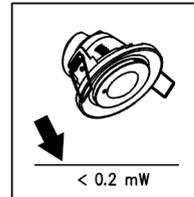


## INSTALLATION

1. Swing the plastic cover a little and adjust time and LUX knob.
2. Unload the transparent vinyl cover, loose the screws in the connection terminal, and then connect the power to connection terminal of sensor according to connection-wire diagram.
3. Fold the metal spring of the sensor upwards, until they are in "I" position with sensor, and then put the sensor into the hole or installation box which is on the ceiling and has the similar size with the sensor. Releasing the spring, the sensor will be set in this installation position.
4. After finishing installing, turn on the power and then test it

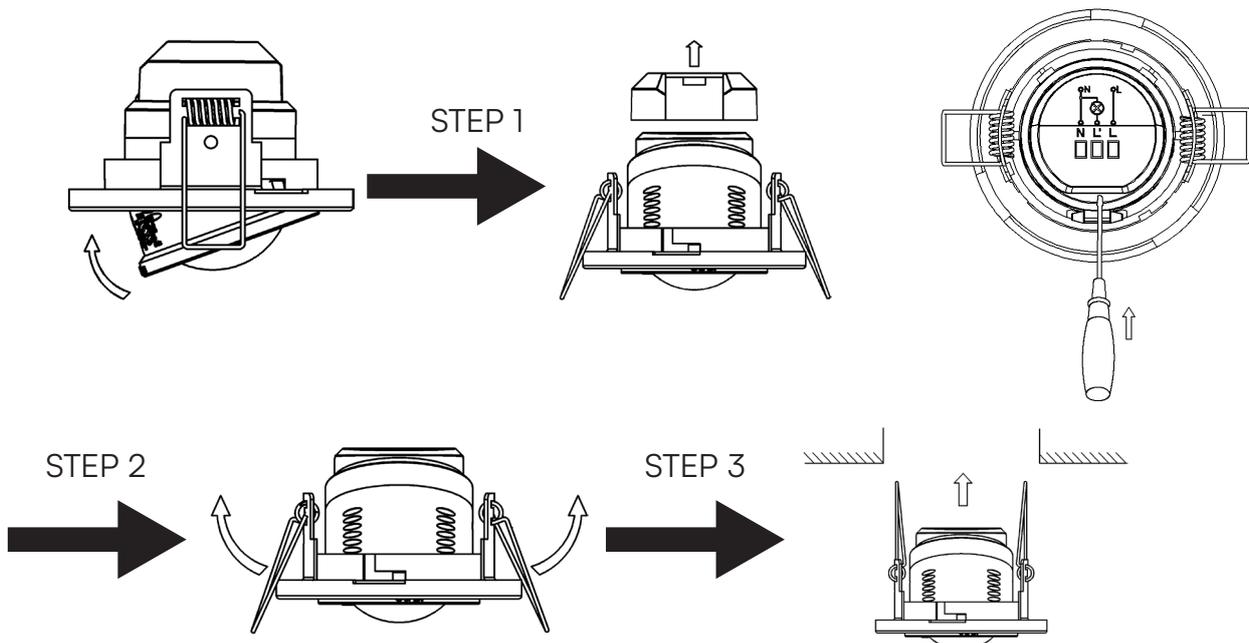


---

## CONNECTION-WIRE DIAGRAM

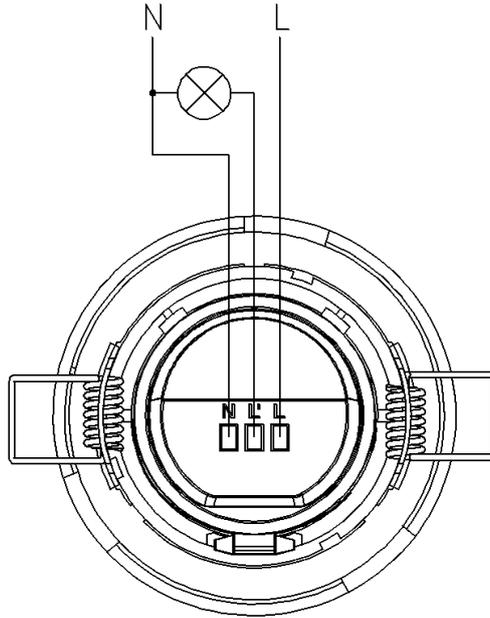

## TEST

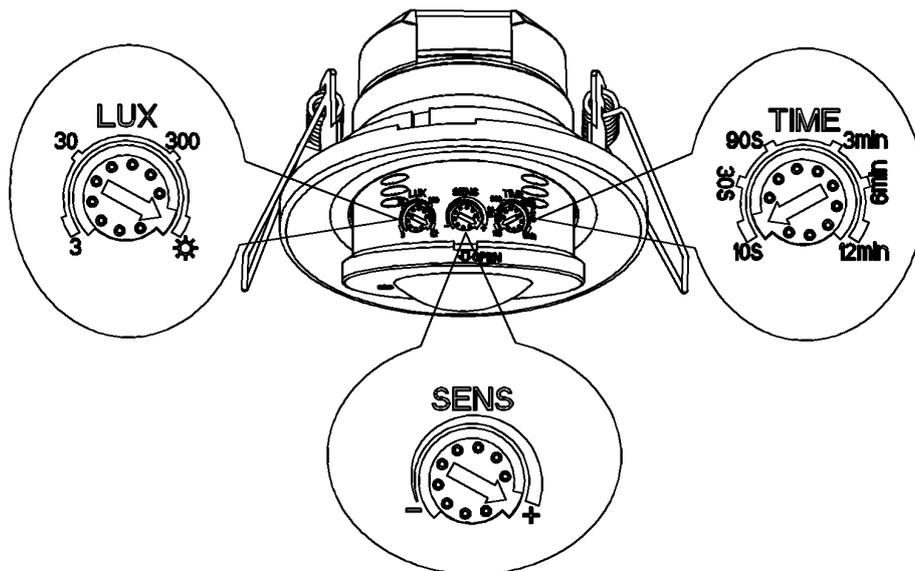

- Turn the LUX knob clockwise on the maximum (sun). Turn the SENS knob clockwise on the maximum (+). Turn the TIME knob anti-clockwise on the minimum (10s).
- When you switch on the power, the light will be on at once. And 10sec $\pm$ 3sec later the light will be off automatically. Then if the sensor receives induction signal again, it can work normally.
- When the sensor receives the second induction signals within the first induction, it will restart to time from the moment.
- Turn LUX knob anti-clockwise on the minimum (3). If the ambient light is less than 3LUX (darkness), the inductor load could work when it receives induction signal.

**Note: When testing in daylight, please turn LUX knob to ☀ (SUN) position, otherwise the sensor could not work!**

---

---

## **NOTES**

- Electrician or experienced human can install it.
- Can not be installed on the uneven and shaky surface
- In front of the sensor there shouldn't be obstructive object affecting detection.
- Avoid installing it near the metal and glass which may affect the sensor.
- For your safety, please don't open the case if you find hitch after installation.

## **SOME PROBLEM AND SOLVED WAY:**

- **The load don't work:**
  - a. Check the power and the load.
  - b. Whether the indicator light is turned on after sensing? If yes, please check load.
  - c. If the indicator light does not turn on after sensing, please check if the working light corresponds to the ambient light.
  - d. Please check if the working voltage corresponds to the power source.
- **The sensitivity is poor:**
  - a. Please check the ambient temperature.
  - b. Please check if the signals source is in the detection fields.
  - c. Please check the installation height.
- **The sensor can't shut automatically the load:**
  - a. If there are continual signals in the detection fields.
  - b. If the time delay is set to the longest.
  - c. If the power corresponds to the instruction.

RoHS

